


GENERAL

The RUKRA alarm pushbuttons have got a speaker and a microphone. The microphone is always active during a call, the speaker is only active while pressing the white button. The black alarm button must be pressed for 2 seconds to make an alarm call.

END OF ALARM

The black alarm button has besides making an alarm call even the additional function "end of alarm". Keeps the alarm button \pm 8 seconds pressed and "end of alarm" (if phonenumber is programmed in the elevator phone) call is sent to the RUKRA Web Based Call Center.

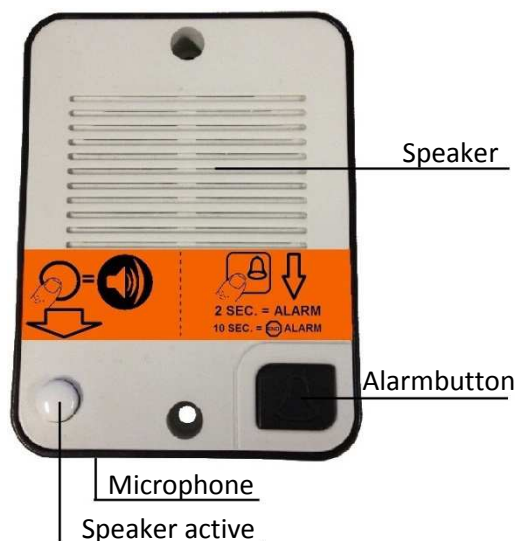


DELIVERING

The pushbuttons are supplied including 3x Plug & Play connection cables, 2x double-sided mounting tape and 1 x 3-way splitter.

Please see the installation instructions and connection to the elevator phone next to this in the picture.

Use only the supplied flatcables and the 3-way splitter. If you want to shorten a cable then make sure that both connectors of the cable have been in the same way pinched.

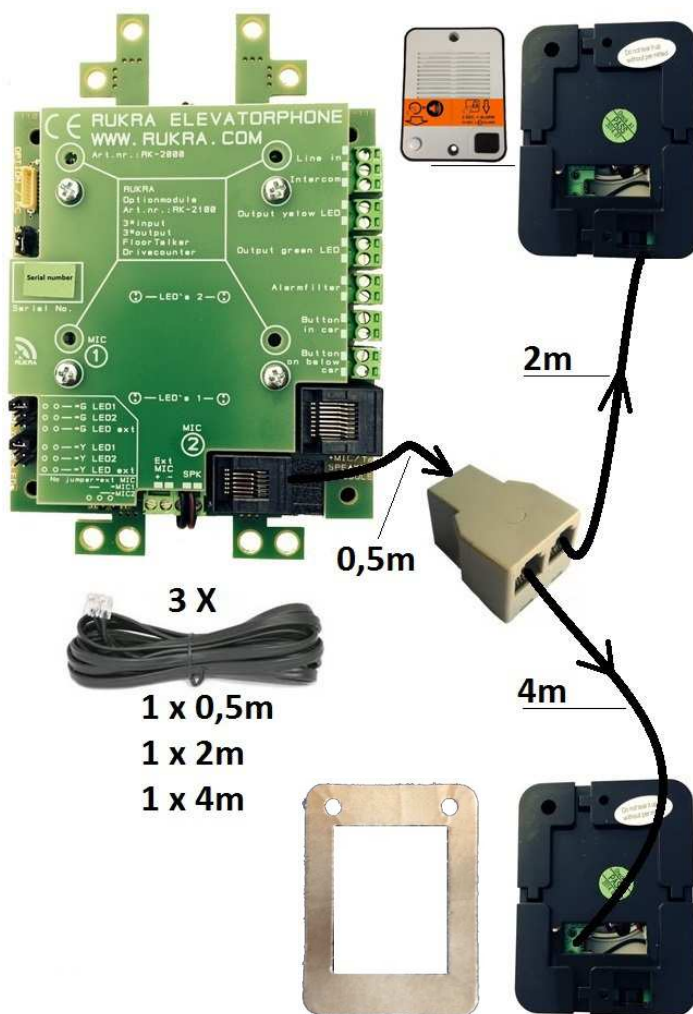

TECHNICALL

- Power : None
- Enclosure : ABS Plastic
- Cable : Flatcable 6/6
- Connection : Plug&Play with connectors
- Size : H*W*D = 100*77*25mm
- CE : The CE symbol indicates that the product complies with the European directives.
 On our website you can download the declaration of conformity.
- Warranty : 2 year Carry in

Delivery includes : 2 x alarmbutton, 3 cables, 1 splitter and 2x doublesided mountingtape

TIP Always make sure that the alarm buttons above and below the elevator are easily accessible.

Read this manual carefully before you start the installation or programming